

Current Transformer Cabinets

XCEL Area Units – MN,WI | UL listed

Minnesota

Underground Entry and Overhead Exit

Catalog Number	Amps	Voltage	Phase	SCCR	Dimensions		
					H"	W"	D"
XCLMM-434	400	600	3Ø4W	65kA	48	25	10
XCLMM-613	600	600	1Ø3W	65kA	48	25	10
XCLMM-634	600	600	3Ø4W	65kA	48	36	14
XCLMM-813	800	600	1Ø3W	65kA	48	25	10
XCLMM-834	800	600	3Ø4W	65kA	54	36	14
XCLMM-1234	1200	600	3Ø4W	85kA	66	42	14
XCLMM-1634	1600	600	3Ø4W	85kA	66	42	14
XCLMM-2034	2000	600	3Ø4W	85kA	66	42	14

Wisconsin

Underground Entry and Overhead Exit

Catalog Number	Amps	Voltage	Phase	SCCR	Dimensions		
					H"	W"	D"
XCLWM-434	400	600	3Ø4W	65kA	48	36	14
XCLWM-613	600	600	1Ø3W	65kA	48	25	10
XCLWM-634	600	600	3Ø4W	65kA	48	36	14
XCLWM-813	800	600	1Ø3W	65kA	48	25	10
XCLWM-834	800	600	3Ø4W	65kA	54	36	14
XCLWM-1234	1200	600	3Ø4W	85kA	66	42	14
XCLWM-1634	1600	600	3Ø4W	85kA	66	42	14
XCLWM-2034	2000	600	3Ø4W	85kA	66	42	14

Underground Entry and Underground Exit

Catalog Number	Amps	Voltage	Phase	SCCR	Dimensions		
					H"	W"	D"
XCLWM-634UGA	600	600	3Ø4W	65kA	48	46	12
XCLWM-834UGA	800	600	3Ø4W	65kA	48	46	12

Notes

- Line Lugs are provided with these units

Utility requirements for this equipment may vary. Always consult the serving utility for their requirements prior to ordering or installing this equipment. This product must be installed by a licensed electrician. Installation of this equipment may require local electrical inspector approval.



Current Transformer Cabinets

XCEL Area Units – MI, WI | UL listed

Underground Entry and Overhead Exit

Catalog Number	Amps	Voltage	Phase	SCCR	Dimensions		
					H"	W"	D"
XCLWM-434	400	600	3Ø4W	65kA	48	36	14
XCLWM-613	600	600	1Ø3W	65kA	48	25	10
XCLWM-634	600	600	3Ø4W	65kA	48	36	14
XCLWM-813	800	600	1Ø3W	65kA	48	25	10
XCLWM-834	800	600	3Ø4W	65kA	54	36	14
XCLWM-1234	1200	600	3Ø4W	85kA	66	42	14
XCLWM-1634	1600	600	3Ø4W	85kA	66	42	14
XCLWM-2034	2000	600	3Ø4W	85kA	66	42	14

Notes

- Line Lugs are not provided with these units

Utility requirements for this equipment may vary. Always consult the serving utility for their requirements prior to ordering or installing this equipment. This product must be installed by a licensed electrician. Installation of this equipment may require local electrical inspector approval.

